

RUBBER PADS FOR INSTALLATION OF AN OVOCONTROL[®] AUTOMATIC FEEDER <u>ON SENSITIVE ROOFTOPS</u>


INSTRUCTIONS

This box includes three rubber pads, each 1ft x 1ft as well as installation hardware. Please use one washer, a carriage bolt and nut to attach a mat to each of the three feeder feet as in the illustration below.

Thread the bolt from the bottom up to ensure it does not damage the roof surface.

TOOLS REQUIRED

The nuts included in the kit require a 9/16" socket wrench, adjustable wrench or pliers to fasten securely.

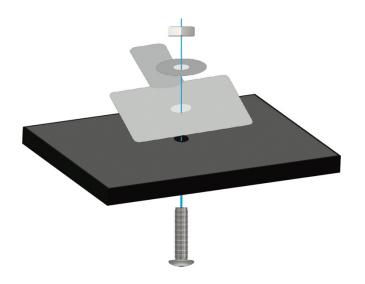

48701 San Pedro Street, La Quinta, CA 92253 Tel: 949.388.3671 – FAX: 760.282.3080 – email: erick.wolf@ovocontrol.com